



[AURA]

GEN 2 LED FLOODLIGHT

USER MANUAL



INTRODUCTION

Please ensure that the luminaire is installed in accordance with the below instructions. **Teknik Lighting Solutions Pty Ltd** assumes no responsibility for inappropriate use or installation of the product, including any associated damage caused.


PRECAUTIONS

1. Read the entire manual carefully before installation and operation.
2. The Warranty Period is listed on the product and the packaging. Teknik will repair or replace the product if it fails or becomes defective during normal use within the prescribed warranty period.
3. Declared lumen output is based upon measurements obtained during operation on the appointed LED electronic driver under standardised laboratory conditions.
4. Instant restart is allowed.
5. The lifetime of the product is affected when it is used in a fully enclosed fixture.
6. Do not change or tamper with any internal electric circuits or wiring, connectors or cables for any reasons.
7. Do not insert foreign objects into the product. This may result in electric shock, malfunction or damage to the products.
8. When in operation the luminaire temperature may reach up to 60°C.
9. Teknik accepts no liability for any injuries or damages resulting from the incorrect use of the lamp or use of the lamp in combination with inappropriate equipment.
10. Luminaire is non-dimmable.
11. For further information, please contact Teknik Lighting Solutions or your local distributor.
12. This product has no user serviceable parts. If any part is damaged, disconnect from mains and discontinue use.
13. In case of weight discrepancy when replacing old lamps, please ensure that the mounted structure is rated to withstand the weight of the new lamp and installation materials.
14. Do not cover the light.
15. The warranty shall exclude modifications to the product, incorrect installation and use outside of the intended scope.

DISCLAIMERS

1. This product must be installed and used as per these instructions.
2. This product contains no serviceable parts and no attempt should be made to repair this product. If the product is faulty it should be discarded.
3. This product is not suitable for installation in hazardous and/or corrosive areas.
4. Electrical installations periodically receive transient over voltages. This product has been designed to minimise the effect of such voltages on connected equipment. It may not give full protection for extreme over-voltage transients such as those resulting from a close lightning strike.
5. This product utilises intellectual property in the form of registered designs, trademarks, and/or patents. Such intellectual property remains the property of Teknik Lighting Solutions Pty Ltd in all cases.

DIMENSIONAL DRAWING

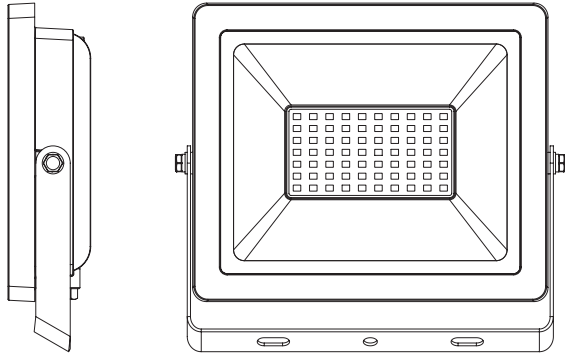

Model	Length mm	Width mm	Height mm	Weight kg
30W	139	126	35	0.38
50W	181	162	38	0.68
100W	280	281	50	1.83
200W	352	340	59	2.8

INSTALLATION

- 1 Disconnect power to circuit.
- 2 According to the mounting hole location, drill the wall and screw the bracket onto the wall using suitable plastic wall plugs and screws.
- 3 Check that the bracket is securely fitted to the wall.
- 4 Plug the [AURA] into the GPO.
- 5 Secure the cable to the wall using suitable clips. Ensure that the cable is not touching the body of the floodlight and that there is sufficient slack in the cable to allow the floodlight to be tilted and adjusted as required.

